

UV PRO 15,000 | 6800 | 4000 | 2800 ozone generator instruction manual

******IMPORTANT******

PLEASE RETAIN THE SHIPPING BOX AND PACKING FOR FUTURE USE!
If the product needs to be returned for any reason there may be a packing charge if the original
packing is not used!

15K, 6800, 4000, & 2800 operation and maintenance instructions

IMPORTANT!!!!

1. *Read instructions thoroughly before operating!!*

2. After shipping the unit via courier or after rough handling such as falling off a shelf, open cabinet by following step 1 of the cleaning instructions. Check to make sure the UV tubes are in place. If the tubes have come out of place, re install them. If they are broken, wearing rubber gloves clean the glass and mercury out and replace the tubes with new ones.

CAUTION, THIS OZONE GENERATOR PRODUCES DANGEROUS LEVELS OF ULTRAVIOLET LIGHT, DISCONNECT POWER BEFORE OPENING TO SERVICE

SPECIFICATIONS FOR 15,000-6800-4000-2800 SERIES ozone generator

Maximum output	15K:(15,000mg/hr) 6800:(6800mg/hr) 4000:(4000mg/hr) 2800:(2800mg/hr)
Fan (rated cfm)	(2800, 4000, 6800:105 cfm) (15K: 130 cfm)
Filter	1 Cleanable foam filter
Cabinet material	Stainless steel chassis
Generation method	Ultraviolet light
Weight	15K: 23lb 6800: 21lb 4000: 20lb 2800: 19lb
Dimensions	20" long x 9 wide x 7 5/8 height (including handle)

INTRODUCTION

This line of ozone generators are designed for various uses. This ozone generator can be used for many uses such as deodorizing businesses, homes as well as oxidizing many organic contaminants.

WARRANTY (please refer to complete warranty attached)

The 2800-15K is warranted against defects in materials and workmanship for a period of 6 years from date of purchase. Liability is limited to parts and labor only. Shipping is the sole responsibility of the customer. CAPS is not liable for damage caused by shipping, misuse, neglect or lack of regular maintenance.

LIABILITY

CAPS assumes no responsibility for any damage done to items from the use or miss use of any product sold or manufactured by CAPS. It is the customers responsibility to test materials prior to use and to ensure that the procedure and installation technique they are using is correct for the application.

HEALTH AND SAFETY

Ozone can be an irritant and a powerful oxidizing agent. As with most all products, ozone is dangerous only when used improperly, as such it is important to follow safe usage guide lines.

When doing a shock treatment, no people, plants, or pets/animals may be in the room when the unit is running.

The room should not be re entered until all ozone has been depleted unless proper breathing respirators are used.

MAINTENANCE FREQUENCY

Under heavy duty use or severely polluted areas, The ozone generator filter should be inspected and cleaned if necessary every 2 to 3 weeks. Inspect the UV tubes for fine dust or residue collecting on UV generator tube surfaces. Light duty use requires cleaning every 2 to 6 months depending on the severity of pollution in the feed air. In dirty conditions cleaning can be as often as 4-6 weeks.

DESCRIPTION OF OZONE GENERATOR

These ozone generators produce ozone by UV light, converting normal oxygen to ozone gas which is a very strong oxidizing agent used to destroy odors and other organic contaminants.

PLACEMENT OF UNIT

This ozone generator is designed as a portable commercial deodorizing device. It uses 120VAC for North America, and 220-240VAC for European countries etc. European models come with an IEC connector and it is up to the customer to supply the proper cord (this can be acquired at any computer shop).

Please note the following points when placing the unit.

- Place on a flat solid surface such as a table or shelf. Do not place on rug flooring to reduce dust entering the unit
- Do not place in an area where the unit could be splashed with water, moisture or in an area that it could get flooded with water.
- Ensure that the unit gets proper fresh air flow. Do not obstruct the incoming or outgoing air from the unit.
- If used in temperatures below freezing, ensure that condensation inside the unit does not occur.
- Set the unit in an area where it will provide the best ozone distribution.
- The use of circulation fan will greatly increase the efficiency of the treatment.

15K, 6800, 4000, & 2800 operation and maintenance instructions

SETTING OF MACHINE (Standard controls with one shot or 7 day timer)

This switch setup is designed for shock treating using the provided one shot shock treatment timer or daily/weekly shock treatments using the 7 day timer if ordered.

(Refer to ozone application/usage instructions for more detailed instructions.)

1. This series has controls that feature an On/off switch to power the unit and fan, a one shot timer to control the amount of time the unit runs for, as well as 3 switches for controlling output in 5-7 steps (depending on model). Ozone production begins when 1, 2, or all 3 output switches, and either the power switch or the timer is set to on. (Note, Do not turn on the power switch and the timer at the same time)

2. The output switches control the output of the ozone generator by turning only some lamps on. The 2800 has 5 UV tubes, switch 1 turns on 1 tube, switch 2 turns on 2 tubes. The 3rd switch turns on the remaining 2 UV tubes. This allows for operation at 5 different output settings. The 4000 has 7 UV tubes, switch 1 turns on 1 tube, switch 2 turns on 2 tubes. The 3rd switch turns on the remaining 4 UV tubes. This allows for operation at 7 different output settings. The 6800 also have 3 output switches, the first switch turns on 2 UV tubes, the second switch turns on 4 UV tubes, the third switch turns on the remaining 6 UV tubes. This allows 6 different output settings.


3. This unit is designed exclusively for shock treatments.

4. TIMER OPERATION

Timer simply bypasses the on/off switch.

To use/set the timer make sure the power switch is in the OFF position. Follow the manufacturers timer instruction for operation.

5. If you have the 7 day timer please refer to included instructions from the manufacturer for setting.

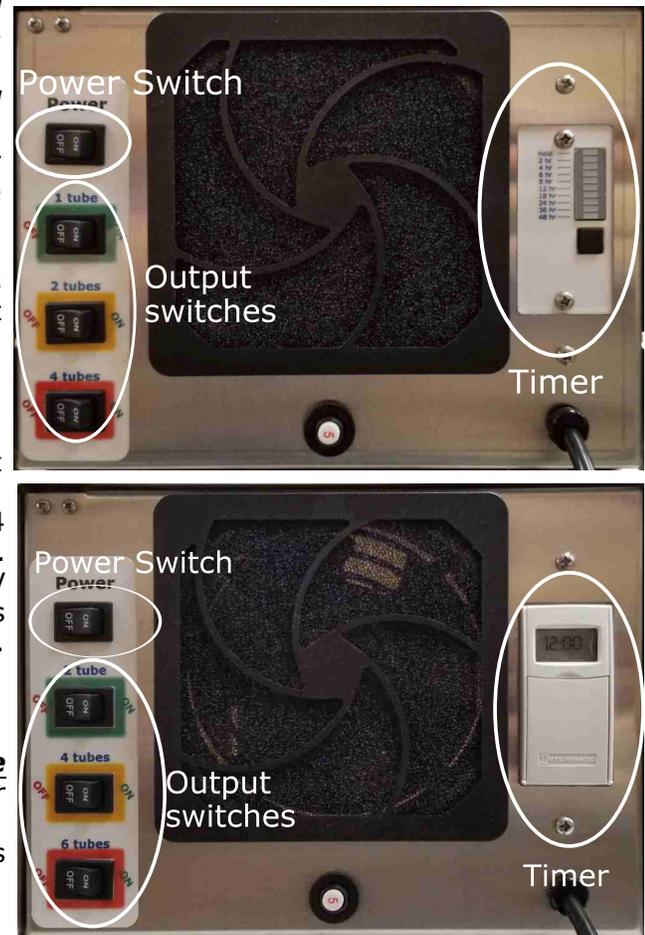

SETTING OF MACHINE (With optional Split switch controls with 7 day timer)

(Refer to ozone application/usage instructions for more detailed instructions.)

Split switch

1. This series has controls that feature a master On/off switch to power the unit and fan, a digital timer to control the amount of time the unit runs for each day and has 7 on and 7 off settings per day. There are also 3 UV tube control switches under the power switch, these switches allow you to control whether the UV tubes are on continual operation or timed operation. To run continual set switches to "Hold", to run the tubes on timed operation set the switches to "Timed".

Examples: (1) If you turn the "2 Tubes" switch to the "Hold" position, and the "4 Tubes" and "6 Tubes" switch to the "Timed" position then you will have 2 tubes working continually and 10 tubes working on the timer.

(2) If you turn the "4 Tubes" switch to "Hold" and turn "2 Tubes" switch to "Timed" then 4 tubes will run continually, and 2 tubes will operate on the timer and the 6 tubes will not run at all.

2. The split switch unit is designed to allow some UV tubes to run constantly and also allow the rest to be turned on by a timer for shock treatments.

3. TIMER OPERATION

Follow the manufacturers timer instruction for operation.

UV 2800, 4000, 6800, & 15K TUBE REMOVAL & CLEANING INSTRUCTIONS

DISCONNECT POWER BEFORE SERVICING
DO NOT LOOK AT UV LIGHT
DO NOT OPERATE WITH LID OFF!!

Note: Images may not match your machine exactly, number and shape of tubes may vary.


1. Remove the 16 Philips (star) screws from the top lid of the UV machine as shown. 6 on each side and 4 on the top.



2. Lift the lid off as indicated in the image.



3. Remove the top support bar by removing 2 Philips (star) screws circled in the image.

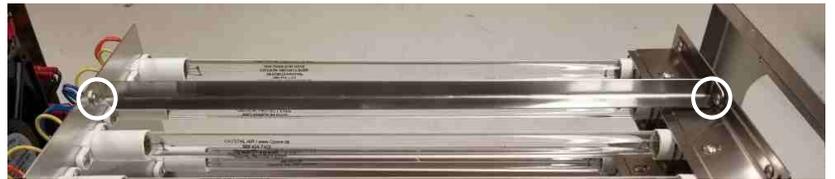

4. Remove the 2 screws indicated in the image. Remove the tube hold down bracket.



5. To remove the tube lift the end and pull while wiggling the tube back and forth being careful not to break it on the steel support / light guard.



6. To remove the second and third row of tubes you will need to first remove the tube support bracket after removing the tubes. This bracket is removed by removing 2 screws from each as indicated in the image. Then repeat the removal of the hold down brackets, ties, and tubes as in step 4, 5, & 6 for 2nd and 3rd rows.



UV 2800, 4000, 6800, & 15K TUBE REMOVAL & CLEANING INSTRUCTIONS

7. Take all the tubes and use an alcohol moistened paper towel or a light soap and water moistened paper towel to wipe the tubes down and remove any deposits. If soap water is used then a second wiping with a clean water moistened paper towel will be required to remove the soap.

-Be very careful not to damage the 2 wires that run the length of the tubes (not on 15K)

-Note that using alcohol will allow you to use the ozone generator as soon as it is re assembled.

-If water is used for cleaning allow tubes to dry in a warm place for a couple hours, ensure that they completely dry.

8. If dirty, wipe the inside of the unit with an alcohol soaked paper towel, or a lightly soapy water moisten towel.

9. Remove the filter by grasping the retaining ring and simply pulling it off of the fan grill.

10. Clean the foam filter with dish soapy water, and rinse thoroughly and allow to dry completely before re installing. Replace the filter by clipping the retaining ring back on the fan grill.

11. Replace the tubes by inserting them with the 2 wires that run the length facing one side or the other. Wiggle the tube slightly side to side while pushing until the pins are fully in the socket.

12. Replace the lid and re install the 16 lid screws. The unit is now ready for service.

6 YEAR INTERNATIONAL WARRANTY STATEMENT FOR THE FOLLOWING MODELS
PRO 200, 450, 970, 3400-1, 3600-1, 5000, 9,000,
UV PRO 550, 550AT, 1100T, 1100AT, 2800, 4000, 6800, HVAC 560, HVAC-C,

1. CAPS warrants that CAPS ozone generators will be free from defects in material and workmanship for a 6 year Period. The warranty period begins on the date of purchase. The original invoice is required as proof of purchase.
2. If an ozone generator is found to be faulty, CAPS will either repair or replace the faulty ozone generator at no charge provided that it is returned to our head office in Langley BC, Canada, transportation charges prepaid and properly packaged as to ensure that the equipment arrives safely.
3. To obtain warranty on your CAPS ozone generator contact CAPS prior to shipping the unit to obtain proper return procedures and an RA (return authorization number) number, see bottom for contact info.

Exclusions

- Damage caused by misuse, neglect or lack of regular maintenance.
- Cost of installation or removal of the equipment.
- Mica plates and UV tubes are limited to 6 months warranty.
- Wall transformers for DC powered units are warranted for 1 year.
- Damage caused by improper packaging or shipping procedures.
- Extra charges incurred as a result of improper packaging or shipping procedures.
- Missing serial numbers, if an ozone generator is missing a serial number the warranty is void with no exceptions.
- Shipping to and from CAPS.

CAPS IS NOT RESPONSIBLE FOR ANY DAMAGES TO EQUIPMENT OR PROPERTY, LOST PROFITS, OR COSTS DUE TO USE OR MISS USE OF ANY CAPS PRODUCT.

CRYSTAL AIR (CAPS) PH - 604 856 0303, Toll free - 1 888 424 7103, Fax - 604 856 3030
Email - info@ozone.ca

For how to information please go to:

<http://www.ozone.ca/modelselect/>

If you would prefer to download a pdf please go to:

<http://www.ozone.ca/support/inst-pdf/ozone-instructions.pdf>